

GRAINPRO® TRANSAFELINER™  
**INSTRUCTION MANUAL**  
MA3001RR0208-21



**“A GREEN, NOT ONLY FOR  
PROFIT COMPANY”**



### GrainPro Inc.

4410A Connecticut Avenue. NW, #163, Washington, DC 20008  
Tel : +1 202-921-6700  
Email : sales@grainpro.com

### GrainPro® Philippines, Inc.

Lot 46 Efficiency Avenue, Subic Bay Gateway Park I, Subic Bay Freeport Zone 2222 Philippines  
Phone: +63 47 252 7884 Fax: +63 47 252 7885 Website: [www.grainpro.com](http://www.grainpro.com)  
Email: [salesasia@grainpro.com](mailto:salesasia@grainpro.com)

### GrainPro Kenya

Space Apartments, GF Shio A2 Maimahui Rd. Nairobi West, Kenya  
Tel: +254 737 177 767  
Fax: +254 710 933 717  
Email: sales@grainpro.com

### GrainPro Mexico, S de RL de CV

Ctoo. Garona No. 903, Sección Tres, Col. Amberes, 37237,  
León, Gto. Mexico  
Mobile: +52 1 (477) 392 0851  
Email: guillermo@grainpro.com

### GrainPro Costa Rica S.R.L.

Residencial Valle del Sol, Calle Lajas, Casa #27 Alto de las Palomas,  
Santa Ana, San José, Costa Rica  
Tel: +506 2282 9129  
Email: infogpcr@grainpro.com

### GrainPro India Post-Harvest Technology Pvt. Ltd.

Office Number 18A109, WeWork Berger Tower 18th Floor,  
C-001/A2, Sector 16-B, Noida, INDIA – 201301  
Landline: +91 120 515 0017  
Customer Service: +91 960 292 0202  
Email: praveen.gupta@grainpro.com

GrainPro® Inc., 1401 K Street NW, Suite 502, Washington D.C. 20005 USA  
Copyright 2019 GrainPro®, Inc.

## TABLE OF CONTENTS

|   |    |
|---|----|
| 1. INTRODUCTION.....  | 4  |
| 2. WARNINGS.....  | 5  |
| 3. RECOMMENDED MOISTURE CONTENT FOR SAFE STORAGE (WET BASIS).....                                     | 5  |
| 4. SMALL PARTS.....   | 6  |
| 5. INSTALLATION.....  | 6  |
| Preparation.....  | 6  |
| 6. ROPE METHOD.....   | 7  |
| Attachment rope of braces (Tape).....   | 7  |
| Installation process.....   | 8  |
| 7. BLOWER METHOD.....   | 10 |
| Installation process.....   | 10 |
| 8. VACUUM METHOD.....   | 11 |
| Installation process.....   | 11 |
| 9. MAGNET METHOD.....   | 12 |
| Installation process.....   | 12 |
| 10. FOLDING METHOD.....   | 14 |
| Attachment of rope braces (Tape).....   | 14 |
| 11. SEALING.....  | 17 |
| Use of Desiccants/Dry Bags (Required).....  | 17 |
| Plastic Valve Installation for Pressure Decay Test and CO <sub>2</sub> or O <sub>2</sub> Reading..... | 17 |
| Sealing of 2-Track PE Zipper.....   | 18 |
| Pressure (Vacuum) Decay Test.....   | 20 |
| Installing the Flexible Adapter Hose for CO <sub>2</sub> or O <sub>2</sub> Reading.....               | 21 |
| Using Carbon Dioxide Analyzer for Monitoring (With CO <sub>2</sub> Flushing) - Optional.....          | 22 |
| 12. CARBON DIOXIDE PURGING.....   | 23 |
| Carbon Dioxide (CO <sub>2</sub> ) Safety.....   | 23 |
| Calculation of Carbon Dioxide requirement.....  | 23 |
| Procedure for purging with Carbon Dioxide (CO <sub>2</sub> ).....                                     | 24 |
| Closing and Opening of the Shipping Container.....  | 27 |
| 13. MAINTENANCE AND CARE.....   | 27 |
| Repairing Punctures and Other Damages.....  | 27 |
| Recycling.....  | 27 |
| 14. FREQUENTLY ASKED QUESTIONS.....   | 27 |
| 15. WARRANTY CLAUSE.....  | 28 |

# 1. INTRODUCTION

Transportation plays a key role in the global trade of agricultural commodities. Preserving the quality of agricultural commodity in transit is one of the major issues affecting this global activity. Commodities transported in containers are often infested upon arrival at destination ports because of excessive condensation. Hence, adequate amount of moisture favored the growth and development of microorganisms including fungi. On the other hand, the traders are very much aware of preserving the quality of agricultural products in transit. Agricultural commodities are damaged due to excessive condensation resulting to the growth of microorganisms and eventual infestation and spoilage.

GrainPro offers a solution for safe storage of agricultural commodities even when in transit. The GrainPro® TranSafeliner™ (TSL™) is designed to prevent condensation, moisture ingress and control of infestation without toxic fumigants while the commodity is in transit. TSL fits in a standard 20' and 40' shipping container and is covered by a GrainPro patent.

TSL is made of a special transparent, multi-layer polyethylene (PE) film which has superior gas and moisture barrier properties. The gases produced by natural respiration of insects and commodity are retained. The low moisture permeability of the plastic material prevents exchange of moisture between the atmosphere and the commodity inside the TSL thus condensation can be prevented.

## 1.1. FEATURES:

- 1.1.1. Effectively eliminates insect infestation of agricultural commodities while in transit.
- 1.1.2. Reduces the oxidation of commodities, growth, and development of microorganisms.
- 1.1.3. Designed for easy installation and disassembly in containers using tapes and nylon string.
- 1.1.4. Minimizes condensation, inhibits/controls mold growth, and eventual infestation.
- 1.1.5. Reduces expensive container rental while waiting for conventional fumigation.

## 1.2. PRODUCT GUARANTEE:

- 1.2.1. In accordance with the terms and conditions herewith, GrainPro, Inc. fully guarantees the quality of this product provided it is used according to the instructions in this operator's manual.
- 1.2.2. Please read and understand the manual thoroughly before using the TSL.

## 1.3. COMMENTS, COMPLAINTS, AND/OR CLARIFICATIONS:

- 1.3.1. Please contact [customercare@grainpro.com](mailto:customercare@grainpro.com).
- 1.3.2. We shall be glad to answer any of your questions.

## 2. WARNING!

- 2.1. Do not load fresh produce or commodity with high moisture into the TSL.
- 2.2. Do not wear shoes with spikes as this might cause damage to the TSL.
- 2.3. Do not directly install TSL without clearing the container van of debris and other foreign materials.
- 2.4. Do not smoke while installing. Cigarette butts might burn and damage the TSL.
- 2.5. Do not directly insert or hook nylon rope into the TSL.
- 2.6. Do not put TSL on top of wooden pallet or equivalent to prevent puncture by sharp edges and nails.
- 2.7. Do not allow loading vehicles (i.e., forklifts/pallet trucks) to run over the TSL as this will cause damage to the P.E material. (Refer to 6.2.6.2 for precautionary measure).

## 3. RECOMMENDED MOISTURE CONTENT FOR SAFE STORAGE (WET BASIS)

| COMMODITY        | RECOMMENDED MC |
|------------------|----------------|
| Barley           | 12%            |
| Black Pepper     | 10%            |
| Cashew nuts      | 8%             |
| Chia seeds       | 7%             |
| Chickpeas        | 12%            |
| Cocoa beans      | 7%             |
| Coffee beans     | 12%            |
| Cotton seed      | 10%            |
| Cowpea           | 12%            |
| Maize            | 13.5           |
| Millet           | 12%            |
| Mung bean        | 12%            |
| Oats             | 12%            |
| Paddy            | 13.5%          |
| Paddy, rice bran | 11%            |
| Peanuts, shelled | 7%             |
| Red Chili Pepper | 8-10%          |
| Rice, milled     | 12%            |
| Rye              | 12%            |
| Sesame           | 5.5%           |
| Sorghum          | 12%            |
| Soybean          | 12%            |
| Sunflower        | 7%             |
| Wheat            | 13%            |

You may also contact us through [customer@grainpro.com](mailto:customer@grainpro.com) for more information or for commodities that are not on the list.

## 4. SMALL PARTS

|  |   |
|--|---|
| 4.1. Liner                             | 1 piece                                   |
| 4.2. 2 Track zipper slider, blue       | 2 pieces                                  |
| 4.3. Nylon string                      | 17m x 1 piece (for TSL 20)                |
|  | 25m x 2 pieces (for TSL 40 and High Cube) |
| 4.4. Desiccant (Calcium Chloride) CaCl | 6 pieces for TSL 20                       |
|  | 12 pieces for TSL 40 and High Cube        |
| 4.5. Plastic Valve                     | 1 piece                                   |
| 4.6. Packaging Box                     | 1-piece TSL 20 per box                    |
|  | 1-piece TSL 40 or TSL High Cube per box   |
| 4.7. Woven OPP tape                    | 15 pieces for TSL 20                      |
|  | 26 pieces for TSL 40 and TSL High Cube    |

## 5. INSTALLATION

### 5.1. PREPARATION


5.1.1. Check the moisture content of the commodity using GrainPro Moisture Meter (MM5) (available for sale from GrainPro, Inc.) to ensure the MC is at a safe level for storage.



5.1.2. Workers should not wear shoes with spikes that might cause damage to the TSL.



5.1.3. Ensure that container floor is free of any sharp objects that may damage the liner.

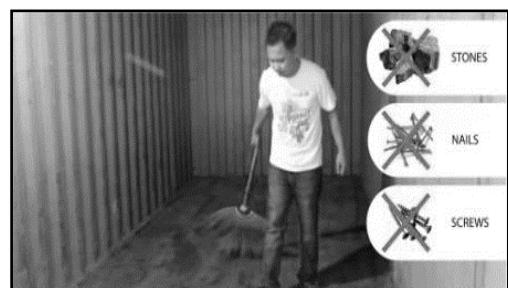

5.1.4. Place a mat or thick cardboard on the floor as additional protection for the TSL.



5.1.5. Carefully unfold the TSL and lay it facing upward.



5.1.6. Pull the top portion to unfold.




## 6. ROPE METHOD

### 6.1. ATTACHMENT OF ROPE BRACES (TAPE)

6.1.1. On the laid TSL find the broken line markings from the back end of the TSL measure 125cm along the broken line and attach the supplied Woven OPP Tapes.



6.1.2. Stick another set of Woven OPP Tape along the broken line with a 100cm distance in between them. In total there will be 14 pieces of rope braces (Woven OPP Tape) for TSL-20 and 26 pieces for TSL-40. See picture on the right for rope brace location guide.

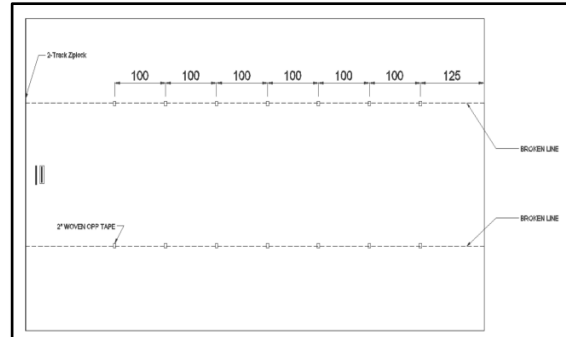

## 6.2. INSTALLATION PROCESS

6.2.1. Secure one end of the nylon rope into the hook located on the side wall and into the first hook on the ceiling of one side of the container van.



6.2.2. Insert the free end of the nylon rope onto the first woven OPP tape and then into the hook found on the container ceiling. The rope braces on the TSL should be positioned in-between the hooks (except for the first rope brace near the TSL zipper).



Note: Do not insert nylon rope into the woven OPP tape when it is aligned with the container's hooks.


### 6.2.3. FOR TSL - 20

6.2.3.1. Hanging the liner should be done by completing one side (left or right) of the container first, starting from the door towards the back and then going around the perimeter of the container.

6.2.3.2. Follow procedure in 2.2.2. until the nylon rope is inserted through all the rope braces and container hooks.

6.2.3.3. Pull the loose end of the nylon rope to create tension and make sure that there are no sagging sections on the hanged TSL.

6.2.3.4. Secure the loose end of the nylon rope on the hook found on the mid-section of the container door.

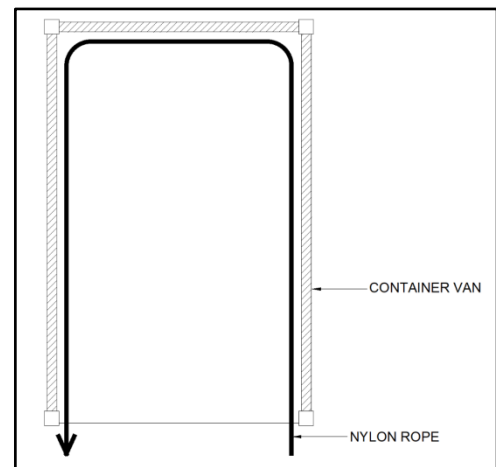



#### 6.2.4. FOR TSL - 40

6.2.4.1. Hanging of liner should be done by completing one side (left or right) of the container first, starting from the door towards the back of the container. Two nylon ropes are required to be used for the TSL - 40, one for each side of the container.

6.2.4.2. Follow procedure in 2.2.2. until the nylon rope is inserted through the rope braces and hooks on one side of the container.


6.2.4.3. When one side of the container is complete, pull the loose end of the nylon rope towards the door of the container and insert it through the first hook found near the door.

6.2.4.4. Pull the loose end of the nylon rope to create tension and make sure that there are no sagging sections on the hanged TSL.

6.2.4.5. Then secure the loose end of the nylon rope onto the hook found on the mid-section of the container door.

6.2.4.6. Procedures 2.2.4.1 to 2.2.4.5 will be used on the other side of the container.

6.2.5. Secure excess liner material near the door perimeter by folding and sticking it on the sides of the door using tapes to prevent possible damage and to make it more accessible during loading.

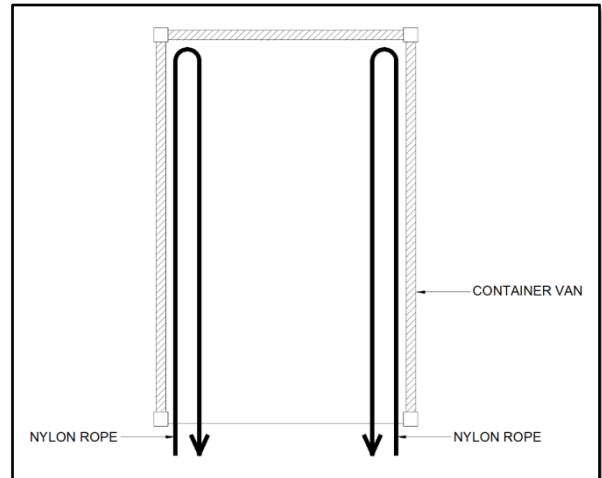


6.2.6. Place cardboards on the TSL floor and along the walls for added protection.

6.2.6.1. **For Manual Loading** - workers should not wear shoes with spikes that might cause damage to the liner.

6.2.6.2. **For Loading with forklift** – place extra protection along the walls and floor.




6.2.7. When stacking bags make sure to leave at least 20cm distance between the roof of the container and top of the stacks to prevent condensation.

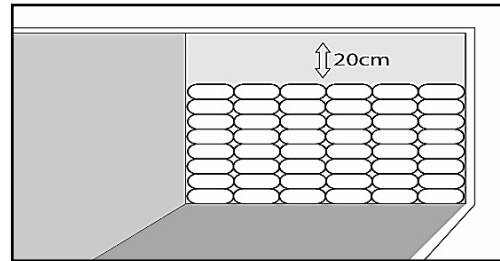

## 7. BLOWER METHOD

### 7.1. INSTALLATION PROCESS

7.1.1. Turn on the industrial fan and introduce air into the TSL by holding it open. At least 2 persons is needed to hold the opening while air is being blown inside the liner.

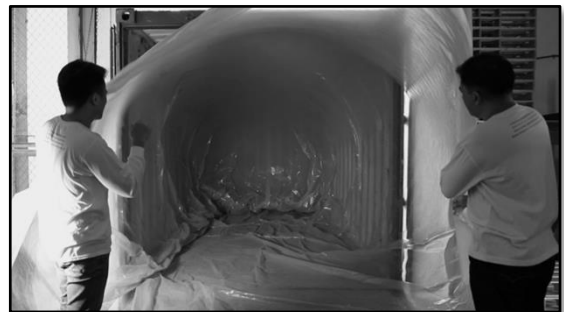

7.1.2. Wait until the TSL spreads perfectly on the sides and ceiling of the container van. A worker can also enter the TSL to help spread the TSL material and help correct any folds in the TSL.



7.1.3. Secure excess liner material near the door perimeter by folding and sticking it on the sides of the door using tapes to prevent possible damage and to make it more accessible during loading.




7.1.4. Place card boards on the TSL floor and along the walls for added protection.



7.1.4.1. **For Manual Loading** - workers should not wear shoes with spikes that might cause damage to the liner.




7.1.5. When stacking bags make sure to leave at least 20cm distance between the roof of the container and top of the stacks to prevent condensation.

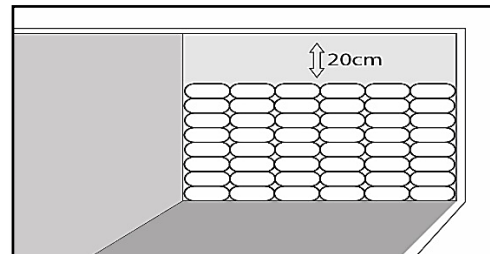

## 8. VACUUM METHOD

### 8.1. INSTALLATION PROCESS

8.1.1. For the vacuum method, a ventilator/fan shall be used to create negative pressure between the shipping container and the TSL. The ventilator should have at least a 1000 m<sup>3</sup>/minute of flow rate.

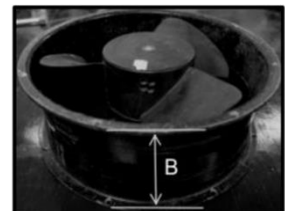

8.1.2. Place the ventilator/fan on the top corner of the container next to its door, this could be on either left or right side of the container. A clamp could be used to keep the ventilator in place.



8.1.3. Fold at least 150cm of the TSL away from the door opening starting from the zipper. Then tape the folded section around the perimeter of the container door.



Note: Make sure not to cover the ventilator with the folded TSL section to avoid possible damage.

8.1.4. Turn on the ventilator and wait until the TSL spreads perfectly on the sides and ceiling of the container van. A worker can also enter the TSL to help spread the TSL material and help correct any folds in the TSL.




8.1.5. Place cardboards on the TSL floor and along the walls for added protection.



8.1.5.1. **For Manual Loading** - workers should not wear shoes with spikes that might cause damage to the liner.



8.1.6. When stacking bags, make sure to leave at least 20cm distance between the roof of the container and top of the stacks to prevent condensation.

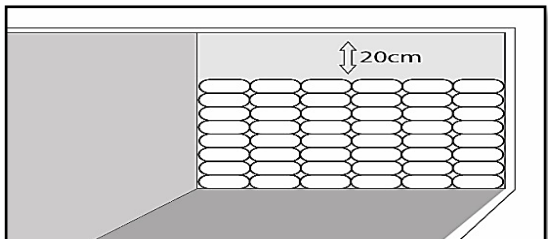

## 9. MAGNET METHOD

### 9.1. INSTALLATION PROCESS

9.1.1. Use magnets with at least 50kg lifting capacity. The magnets must be procured locally.

9.1.2. With the magnet method, the installation of magnets shall be done inside and from the back towards the container door. At least 2 persons are needed for ease of installing the TSL. Prior to installation of TSL, the location of the broken lines should be determined first.

9.1.3. The first magnet shall be placed 125cm from the end and inside of the TSL. Then attach the TSL



and magnet to the corner at the back of the container.

*NOTE: Magnets usually have sharp edges and may cause the liner to shear when in direct contact. Ensure that magnets are covered or wrapped with soft fabric/plastic sheets to prevent liner from tearing.*

9.1.4. The second magnet shall be attached on the same side and about one meter from the first one.

9.1.5. Do procedures 2.1.2. to 2.1.3. to the opposite side. Installation shall be done by twos and alternating (left to right/right to left side) fashion to give workers easier movement inside the TSL.

9.1.6. Succeeding magnets are positioned 100cm from each other and alternately on opposite sides until the end of the container is reached. As standard procedure, use 12 magnets for 20 ft container and 24 magnets for 40 ft container.

9.1.7. Secure excess liner material near the door perimeter by folding and sticking it on the sides of the door using tapes to prevent possible damage and to make it more accessible during loading.

9.1.8. Place card boards on the TSL floor and along the walls for added protection.

9.1.8.1. **For Manual Loading** - workers should not wear shoes with spikes that might cause damage to the liner.






9.1.9. The magnets shall be removed as the container is loaded. Remove the magnets on the sections of the container that is already loaded.



9.1.10. When stacking bags make sure to leave at least 20cm distance between the roof of the container and top of the stacks to prevent condensation.

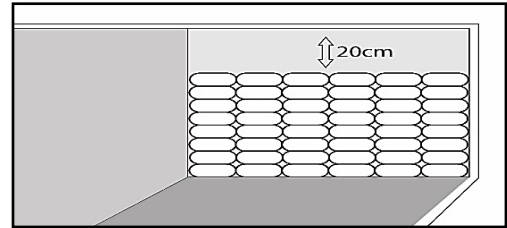

## 10. FOLDING METHOD


A folding method refers a series of alternating folds to create multiple panels/sections of a similar size. The parallel pleats formed by the alternating folds resemble the expandable mid-section of an accordion musical instrument.

### 10.1. ATTACHMENT OF ROPE BRACES (TAPE)

10.1.1. On the laid TSL find the broken line markings from the back end of the TSL measure 125cm along the broken line and attach the supplied Woven OPP Tapes.



10.1.2. Stick another set of Woven OPP Tape along the broken line with a 100cm distance in between them. In total there will be 14 pieces of rope braces (Woven OPP Tape) for TSL-20 and 26 pieces for TSL-40. See picture on the right for rope brace location guide.

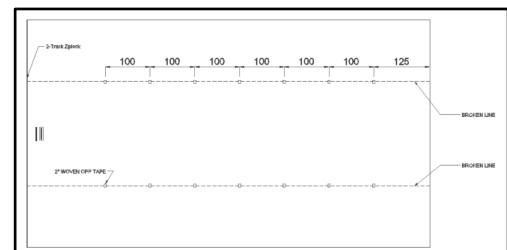


### 10.2. INSTALLATION PROCESS

10.2.1. Secure one end of the nylon rope (flexible nylon cord) into the hook located on the side wall and into the first hook on the ceiling of one side of the container van.



10.2.2. Insert the nylon rope through all the woven OPP tapes attached on one side the TSL then into the hook found on the back end of the container.

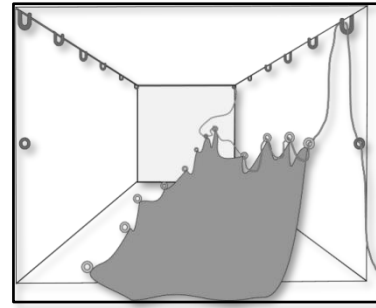


#### 10.2.3. FOR TSL - 20

10.2.3.1. Hanging of liner should be done by completing one side (left or right) of the container first, starting from the door towards the back and then going around the perimeter of the container.

10.2.3.2. Follow procedure in 2.2.2. and when one side is finished insert the loose end of the nylon rope to the hook on the other side (back-end hook) and follow procedure 2.2.2. This time from the back towards the front.

10.2.3.3. Pull the loose end of the nylon rope to create tension and make sure that there are no sagging sections on the hanged TSL.

10.2.3.4. Secure the loose end of the nylon rope on the hook found on the mid-section of the container door.

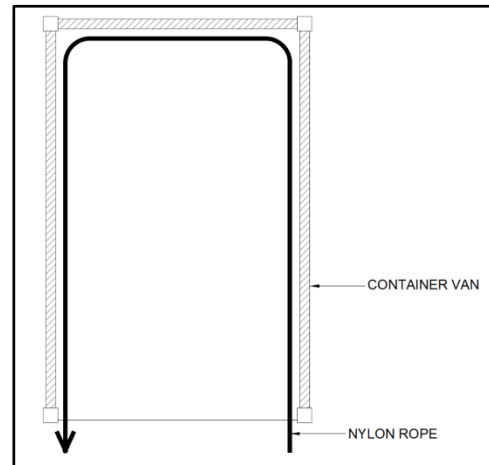

#### 10.2.4. FOR TSL - 40


10.2.4.1. Hanging the liner should be done by completing one side (left or right) of the container first, starting from the door towards the back of the container. Two nylon ropes are required to be used for the TSL - 40, one for each side of the container. 10.2.4.2. Follow procedure in 2.2.2. until the nylon rope is inserted through the rope braces and hooks (front and back end only) on one side of the container.

10.2.4.3. When one side of the container is complete, pull the lose end of the nylon rope towards the door of the container and insert it through the first hook found near the door.

10.2.4.4. Pull the loose end of the nylon rope to create tension and make sure that there are no sagging sections on the hanged TSL.


10.2.4.5. Then secure the loose end of the nylon rope on the hook found on the mid- section of the container door.

10.2.4.6. Complete procedures 2.2.4.1 to 2.2.4.5 onto the other side of the container.

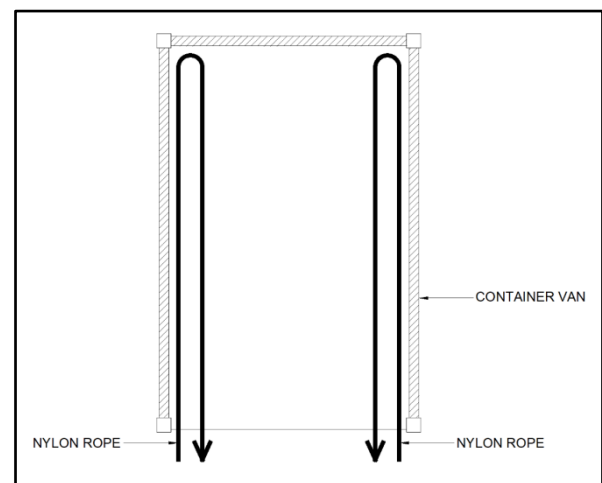

10.2.5. Carefully slide the liner towards the back of the container. Leave enough space for initial loading.

10.2.6. Add 2 pieces of carabiners (not included in the package) for added support. Insert the carabiners into the nylon rope and fasten into the container hooks nearest the folded section of the liner. The carabiners are used for folding method to avoid sagging of the liner during installation.

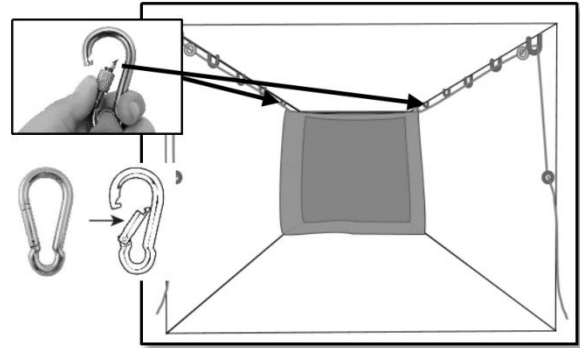


10.2.7. Fold the excess TSL material neatly and secure it around the perimeter of the container walls with tape.



10.2.8. Place cardboards on the TSL floor and along the walls for added protection.

10.2.8.1. **For Forklift loading** - place rubber mats on the TSL floor for added protection.

10.2.8.2. **For Manual Loading** - workers should not wear shoes with spikes that might cause damage to the liner.

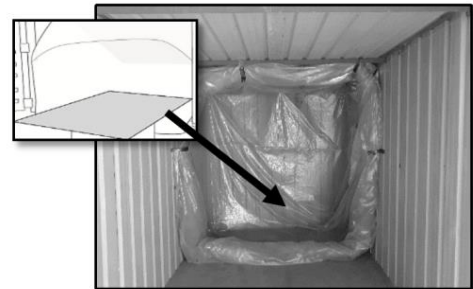


10.2.9. After loading the first section of the TSL, remove the carabiners and tapes then unfold the liner. Pull it a few meters towards the front so the next section of the TSL could be loaded. Then follow procedures 2.2.6. to 2.2.8.

10.2.10. Complete procedure 2.2.9. until the TSL is fully loaded.





10.2.11. Make sure to leave at least 20cm distance between the roof of the container and top of the stacks to prevent condensation.

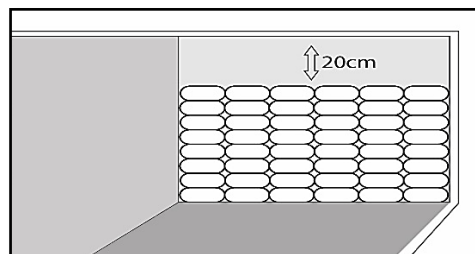

## 11. SEALING

### 11.1. USE OF DESICCANTS/DRY BAGS (REQUIRED)

11.1.1. Desiccants are commonly used to protect goods against moisture damage. Hygroscopic commodities, such as cocoa, coffee, and various nuts and grains are particularly susceptible to mold and rot when exposed to condensation and humidity.



11.1.2. Requirement:

- One-thousand two hundred (1200) grams or 6 bags of GrainPro Dry Bags per 20-footer.
- Two-thousand four hundred (2400) grams or 12 bags of GrainPro Dry Bags per 40-footer.

Note: 1 GrainPro Dry Bag contains 200 grams of calcium chloride and can absorb grams of moisture.

11.1.3. Place the GrainPro Dry Bags in perforated bags or sacks to prevent direct contact with commodity.


11.1.4. Cardboards may be placed on top of the stack. Cardboards provide increased water absorption. Then put the desiccants on top of the cardboards.

### 11.2. PLASTIC VALVE INSTALLATION FOR PRESSURE DECAY TEST (PDT), OR CO<sub>2</sub> OR O<sub>2</sub> READING


11.2.1. Install plastic valve before sealing or zipping the liner. Conduct PDT after sealing. CO<sub>2</sub> or O<sub>2</sub> reading (optional) is taken upon arrival of the container to verify the integrity of the TSL's hermeticity. After use, close the plastic valve.

11.2.2. Plastic valve components:

- Cap – To open and close the valve.
- Body – Where tube or hose is inserted for Pressure Decay Test (PDT) and CO<sub>2</sub> or O<sub>2</sub> reading
- Base – Use for piercing the liner.

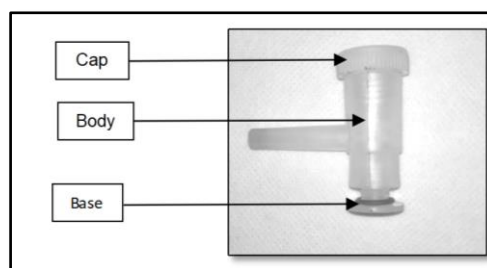


11.2.3. Dismantle the plastic valve by unscrewing the base.

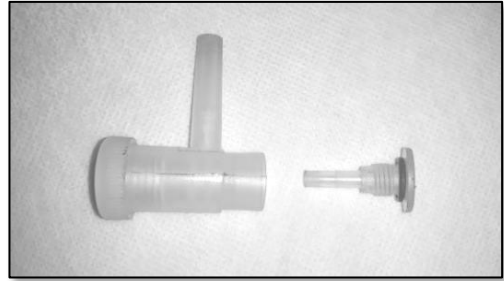

11.2.4. Pierce the TSL using the plastic valve. Piercing should be done from the inner side of the TSL (approximately 20 cm from the zipper).



11.2.5. Screw the plastic valve body. The cap of the plastic valve should be positioned outside the loaded TSL. Firmly tighten the body into the base to prevent leakage.

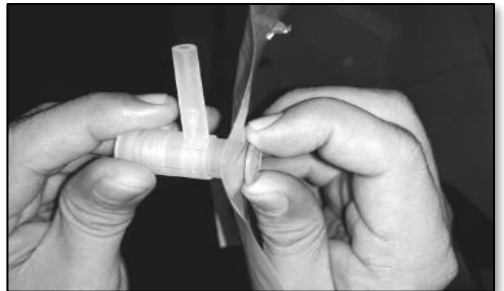


### 11.3. SEALING OF 2-TRACK PE ZIPPER


11.3.1. Remove the tapes and unfold the excess liner from the door perimeter and let it loose.



11.3.2. Untie the nylon rope from the rod on the side wall of container van.

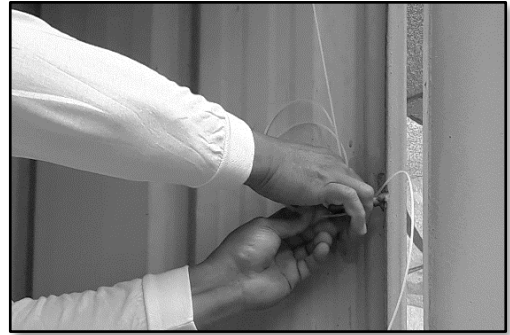

11.3.3. Pull the rope all the way out of the container to provide space between roof and liner for air circulation.

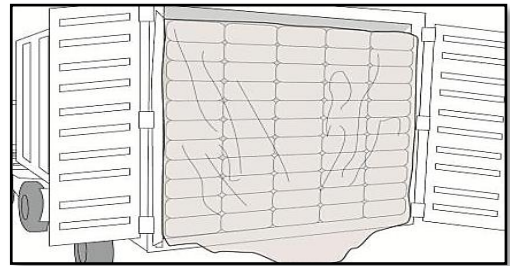


11.3.4. Hold the 2-track zippers together. Align for proper sealing.



11.3.5. Manually zip a few centimeters enough to initially engage the slider.




11.3.6. Position the slider on the manually zipped portion of the zip lock.

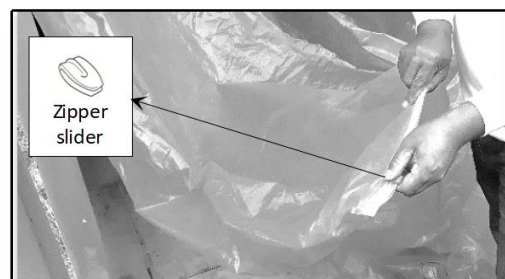

11.3.7. For ease of zipping two persons are required. One person does the zipping, and the other person holds the other end steadily, making sure both sections of the zipper are in a straight line to avoid the zipper length being misaligned. Moving the slider while the zipper or slider is curved forces one of the zipper sections to elongate.



11.3.8. If uneven zipper ends are observed, both ends of the zipper should be slightly stretched and do the zipping from end to end.

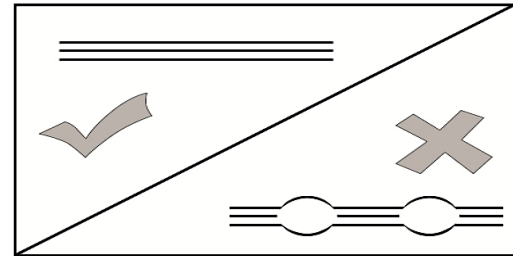


11.3.9. Fold extra liner and tape it against the stack. Ensure that no liner is stuck in-between doors.




#### 11.4. PRESSURE DECAY (VACUUM) TEST

11.4.1. After zipping, perform a pressure (vacuum) decay test (PDT) to ensure gas-tightness. With this test a manometer, vacuum pump and stopwatch are needed. A digital manometer of a commercially available or improvised U-tube manometer can be used to monitor the pressure.

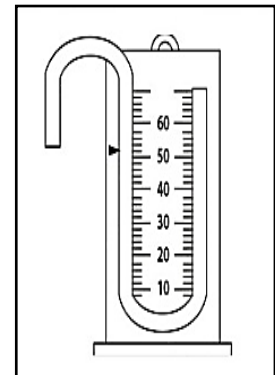


11.4.2. Connect the manometer hose to the flexible plastic valve previously installed in the TSL.

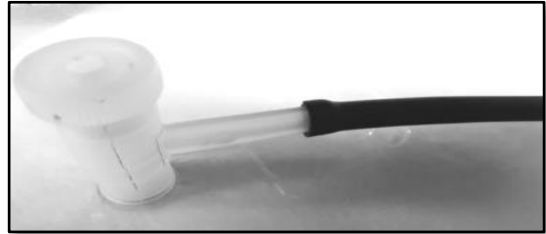

11.4.3. Twist the plastic valve cap to open.



11.4.4. Using a vacuum pump with at least 2.3 cubic meters of suction capacity per minute. Create at least -250 Pascals (Pa) or -25 millimeters' water (mm H<sub>2</sub>O) vacuum inside the TSL by partially opening a portion of the zipper and insert the vacuum pump suction port.

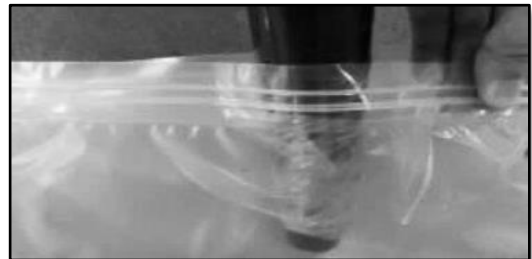

11.4.5. For TSL to be considered sufficiently airtight, the initial vacuum should not decrease by more than one-half ( $\frac{1}{2}$ ) of the final vacuum (created by the vacuum pump) within five (5) minutes.



11.4.6. If the PDT test failed, check for holes/tears and poorly sealed zippers then repeat the PDT procedures.

11.4.7. After conducting PDT, twist the plastic valve closed.




## 11.5. INSTALLING THE FLEXIBLE ADAPTER HOSE FOR CO<sub>2</sub> OR O<sub>2</sub> READING

To ensure gas-tightness, instead of PDT as an alternative the container with TSL can be checked using the CO<sub>2</sub> analyzer or O<sub>2</sub> analyzer.

11.5.1. The flexible adapter hose is included in the GrainPro Carbon Dioxide Analyzer, or the user can find equivalent flexible hose from local hardware using the specifications as shown:

|                 |                 |
|-----------------|-----------------|
| Inside Diameter | 4 mm (0.16 in.) |
| Length          | >5 cm (2 in.)   |

11.5.2. When taking the carbon dioxide or oxygen reading, install the flexible adapter hose into the plastic valve.

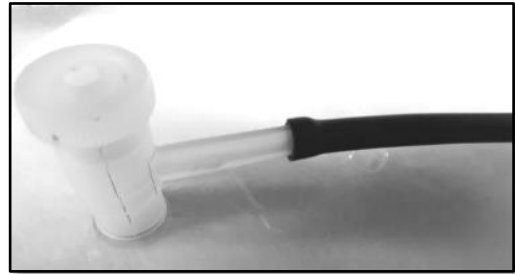


11.5.3. Twist the plastic valve cap to open.



11.5.4. Connect the O<sub>2</sub> or CO<sub>2</sub> analyzer to the flexible adapter hose and take readings.

Acceptable Values:  
 For O<sub>2</sub> analyzer, 3% or below after 15 to 30 days.  
 For CO<sub>2</sub> analyzer, 10 to 15% after 15 to 30 days.

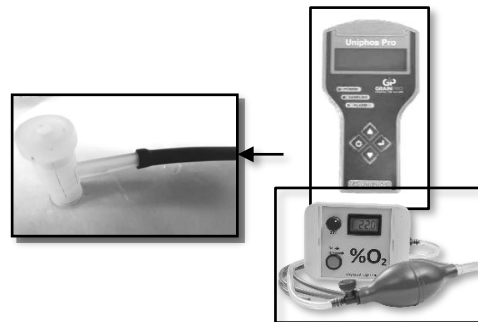

11.5.5. Twist the plastic valve cap to close after taking the readings.




### 11.6. USING CARBON DIOXIDE ANALYZER FOR MONITORING (WITHOUT CO<sub>2</sub> FLUSHING) - OPTIONAL

The GrainPro CO<sub>2</sub> analyzer uses a non-dispersive infrared radiation (NDIR) sensor for the detection of carbon dioxide. When a sensor encounters a target gas, voltage signal is generated in proportion to the gas concentration. This voltage signal is amplified, digitized, and displayed on the instrument's OLED display.

11.6.1. When taking the carbon dioxide or oxygen reading, install the flexible adapter hose into the plastic valve.



11.6.2. Using the analyzer, carbon dioxide level can be checked through the plastic valve with flexible adapter hose before unloading. Increased carbon dioxide level indicates absence of any source of leaks from punctures, holes, or damages. CO<sub>2</sub> level of ambient air is 0.04%.

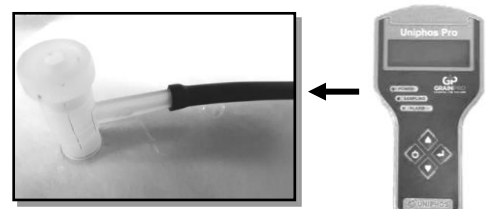

11.6.3. Monitoring of carbon dioxide level is recommended to ensure control of insect infestation. Details of using CO<sub>2</sub> analyzer are discussed in the analyzer's instruction manual.

## 12. CARBON DIOXIDE PURGING

### 12.1. CARBON DIOXIDE (CO<sub>2</sub>) SAFETY

12.1.1. Carbon dioxide does not support life. It can act as a simple asphyxiant by diluting the concentration of oxygen in air below the levels necessary to support life. As it is heavier than air it will tend to concentrate at lower levels.

12.1.2. Avoid breathing gas. Do not get in eyes, on skin, or on clothing. Wear leather safety gloves and safety shoes when handling cylinders.

12.1.3. Protect cylinders from physical damage. Do not drag, roll, slide or drop. While moving cylinder, always keep the removable valve cover in place. Never attempt to lift a cylinder by its cap; the cap is intended solely to protect the valve. When moving cylinders, even for short distances, use a cart (trolley, hand truck, etc.) designed to transport cylinders.

12.1.4. Never insert an object (e.g., wrench, screwdriver, and pry bar) into cap openings; doing so may damage the valve and cause a leak. Use an adjustable strap wrench to remove over-tight or rusted caps. Slowly open the valve. If the valve is hard to open, discontinue use and contact your supplier.

12.1.5. Close the cylinder valve after each use; keep closed even when empty.

12.1.6. Never apply flame or localized heat directly to any part of the cylinder. High temperatures may damage the cylinder and could cause the pressure relief device to fail.

### 12.2. CALCULATION OF CARBON DIOXIDE REQUIREMENT

12.2.1. Carbon dioxide requirement formula:

- Total Volume – Volume Occupied by the Commodity.
- For every 2.0 kg CO<sub>2</sub>, 1 cubic meter of air is replaced.
- Formula: (1 minus bulk density) x Volume (in m<sup>3</sup>) x 2

Recommendations:

- If commodity temperature is at 15 deg Celsius or below, there is no need for TSL.
- If commodity temperature is 15-20 deg Celsius, use TSL without carbon dioxide flushing but fumigation should be conducted upon arrival.
- If commodity temperature is above 20 deg Celsius, use TSL with carbon dioxide flushing.


| <b>CARBON DIOXIDE REQUIREMENT BASED ON COMMODITY</b> |                         |  |               |                         |
|--|-------------------------|--|---------------|-------------------------|
| <b>COMMODITY</b>                                     | <b>BULK</b>             | <b>AMOUNT OF CARBON DIOXIDE (CO<sub>2</sub>) FOR PURGING, kg</b> |               |                         |
|  | <b>DENSITY</b>          | <b>TSL 20</b>  | <b>TSL 40</b> | <b>TSL 40 High Cube</b> |
|  | <b>MT/m<sup>3</sup></b> | <b>33</b>  | <b>66</b>     | <b>76</b>               |
| Barley   | 0.62                    | 25.1   | 50.2          | 57.9                    |
| Cashew nuts  | 0.50                    | 33.0   | 66.0          | 76.2                    |
| Chia seeds   | 0.68                    | 21.1   | 42.2          | 48.8                    |
| Chickpeas  | 0.74                    | 17.2   | 34.3          | 39.6                    |
| Cocoa beans  | 0.56                    | 29.0   | 58.1          | 67.1                    |
| Coffee beans   | 0.59                    | 27.1   | 54.1          | 62.5                    |
| Cotton seed  | 0.40                    | 39.6   | 79.2          | 91.4                    |
| Cowpea   | 0.75                    | 16.5   | 33.0          | 38.1                    |
| Maize  | 0.72                    | 18.5   | 37.0          | 42.7                    |
| Millet   | 0.63                    | 24.4   | 48.8          | 56.4                    |
| Mung bean  | 0.75                    | 16.5   | 33.0          | 38.1                    |
| Oats   | 0.43                    | 37.6   | 75.2          | 86.9                    |
| Paddy  | 0.60                    | 26.4   | 52.8          | 61.0                    |
| Paddy, rice bran                                     | 0.55                    | 29.7   | 59.4          | 68.6                    |
| Peanuts, shelled                                     | 0.64                    | 23.8   | 47.5          | 54.9                    |
| Rice, milled   | 0.80                    | 13.2   | 26.4          | 30.5                    |
| Rye  | 0.72                    | 18.5   | 37.0          | 42.7                    |
| Sesame   | 0.59                    | 27.1   | 54.1          | 62.5                    |
| Sorghum  | 0.72                    | 18.5   | 37.0          | 42.7                    |
| Soybean  | 0.75                    | 16.5   | 33.0          | 38.1                    |
| Sunflower  | 0.41                    | 38.9   | 77.9          | 89.9                    |
| Wheat  | 0.77                    | 15.2   | 30.4          | 35.1                    |

### **12.3. PROCEDURE FOR PURGING WITH CARBON DIOXIDE (CO<sub>2</sub>)**


12.3.1. Make sure that enough CO<sub>2</sub> is available on site. The weight of the CO<sub>2</sub> in the cylinder is supplied by the industrial companies (i.e., 22kg standard capacities which may be used to calculate the number of cylinders required). CO<sub>2</sub> cylinders are available with or without siphon (dip tube). For rapid flushing, the cylinder without siphon should be inverted.




12.3.2. For rapid flushing, the cylinder should be inverted using mechanical inverter. However, the cylinders with siphon should be in upright position during flushing.

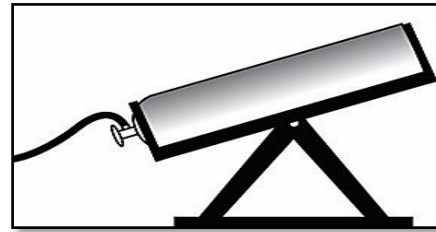

12.3.3. If a mechanical inverter is not available, a makeshift inverter can be made using sandbags or other improvised technique. The cylinder should be inverted with its top resting on one sandbag and the bottom end resting on pile of two or three sandbags high.

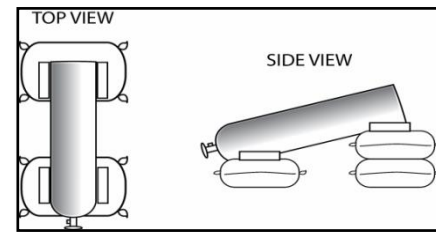

12.3.4. A standard high-pressure hose (available only as separate item) should be connected to the cylinder. This hose should be guaranteed to withstand a pressure of 88 atmospheres (1,300 psi, or 92 kg/cm<sup>2</sup>). Ensure that all connections are made properly, and gaskets are in place where they are required. The high-pressure hose should have a length of about 2-meter and have matching coupler at cylinder.

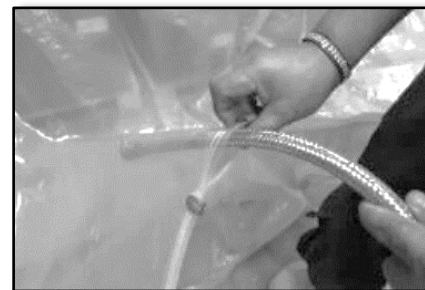

12.3.5. Open a section of the zipper and insert the pressure kit. This serves as outlet to discharge O<sub>2</sub> when flushing.




12.3.6. Open the cylinder valve. Adjust opening of the valve until sound of liquid passing through the hose is heard. The liquid CO<sub>2</sub> flushes into the TSL and evaporates inside, it pushes the air upward, acting as a piston, until the air is totally replaced. The opening through the zipper serves as an outlet for the displaced air.



12.3.7. Ice formation along the pressurized hose and the pipe connector during CO<sub>2</sub> flushing:

12.3.7.1. During this procedure, some ice may form around the gas inlet and high-pressure hose.

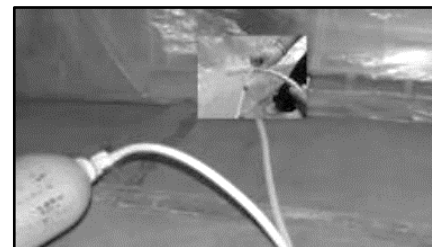

12.3.7.2. Flushing (emptying of the cylinder) depends on the amount of CO<sub>2</sub> to be applied. Emptying one 22kg cylinder should only take about 20 to 30 minutes. If the pressure hose or the inlet valve gets blocked with ice, this is an indication that the CO<sub>2</sub> is being released too quickly. If this happens the cylinder should be closed until the ice melts, and then the cylinder valve should be re-opened and adjusted to reduce the flow.

12.3.7.3. An additional indication that the gas is being released too quickly is when the liner begins to balloon out because pressure begins to build-up inside. If this happens, the gas flow should be decreased at the cylinder valve until the rate of air being expelled through the outlet port is about the same as the rate of CO<sub>2</sub> entering the liner.

12.3.7.4. If necessary, for small scale applications and the cylinder is not inverted, weighing scales may be used to control the weight of the gas delivered. In this case the gas is released slowly through a pressure gauge which can be adjusted to control the flowrate.


12.3.8. Since CO<sub>2</sub> is heavier than air, the air in the TSL displaces upwards and is lifted out of the container through the outlet port. Complete displacement is not possible as there is always some mixing at the interface between the air and the CO<sub>2</sub>. However, if the final CO<sub>2</sub> concentration reaches 80% then the O<sub>2</sub> concentration in the remaining air amounts to 4%. This mixing of the CO<sub>2</sub> with the remaining air, and absorption of CO<sub>2</sub> by the commodity, takes 12-24 hours depending on temperature. This is the time to determine the initial concentration of CO<sub>2</sub>.

12.3.9. After the required weight of CO<sub>2</sub> has been flushed, immediately:

12.3.9.1. Close the CO<sub>2</sub> cylinder valve.



12.3.9.2. Close the zipper thoroughly using the slider.

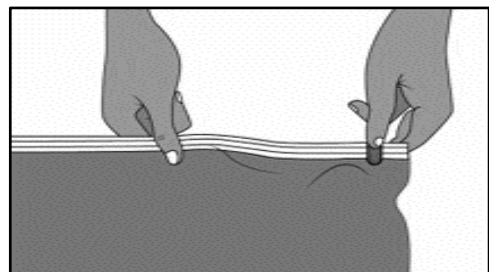


12.3.10. For controlling stored-product insects, maintaining CO<sub>2</sub> above 50% for 10 days, or CO<sub>2</sub> above 35% for 15 days is sufficient to provide complete control, after which the liner may be opened. In addition, temperature accelerates treatment. Effective insect control may be achieved in as little as three days at 25° and less at higher temperatures.

12.3.11. Although CO<sub>2</sub> is not toxic, it is an asphyxiant. It is advisable to unzip the TSL and wait until most of the CO<sub>2</sub> has dispersed.

## 12.4. CLOSING AND OPENING OF THE SHIPPING CONTAINER

12.4.1. Close the shipping container carefully and be sure not to pinch/squeeze the excess liner material between the container doors.

12.4.2. Care should be taken when opening the shipping container considering shifting of loads while on transit. It is advised to open one side of the door first to check the loads.

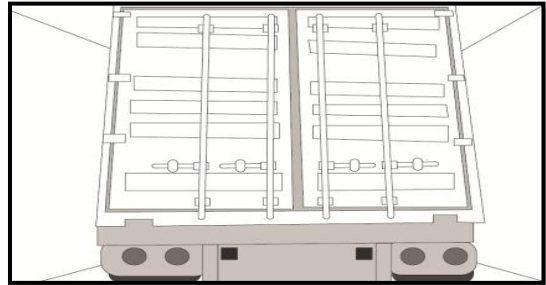

## 13. MAINTENANCE AND CARE

### 13.1. REPAIRING PUNCTURES AND OTHER DAMAGES

13.1.1. Use an ordinary 2" wide plastic adhesive tape:

- a. Clean the surface of the damaged area with damp cloth and allow the surface to totally dry before applying the plastic tape.

13.1.2. Protective maintenance:

- a. Check the plastic tape occasionally and replace or re-patch if necessary.



### 13.2. RECYCLING

GrainPro TSL is made of polyethylene with barrier layer.

13.2.1. The products can be delivered to the nearest recycling facilities in the area.

13.2.2. Plastic #4 – LDPE (Low Density Polyethylene) can be recycled into compost bins, paneling, trash can liners and cans, floor tiles, and shipping envelopes.

## 14. FREQUENTLY ASKED QUESTIONS

14.1. WHAT IS TSL?

- The TSL is a specially designed Ultra Hermetic™ liner to handle loads in shipping containers while in transit.

14.2. WHAT COMMODITIES CAN I STORE IN IT?

- The TSL can be used to store a wide variety of dried grains such as paddy, maize, nuts, beans, coffee, cacao, and soybean.

14.3. WHEN SHOULD I USE IT?

- The TSL is used primarily when shipping commodities.

14.4. WHAT IS ITS CAPACITY?

- TSL has the same capacity when used as a standard 20-ft shipping container which is 30,000 kg of commodity on average.

14.5. HOW LONG CAN I KEEP COMMODITIES INSIDE THE TSL?

- It is recommended to use TSL during the duration of the trip. Upon arrival, the commodities should be unloaded and stored properly in a warehouse.

- 14.6. CAN I USE THE TSL AS A STAND-ALONE STORAGE UNIT?
- No. The TSL will collapse as a stand-alone bulk storage unit.
- 14.7. HOW MANY PEOPLE ARE NEEDED TO SET UP THE TSL?
- At least two people are needed to set up the TSL.
- 14.8. IS IT REUSABLE?
- TSL is reusable if Hermiticity is maintained and not damaged during unloading of commodities.

## 15. WARRANTY CLAUSE

GrainPro® hereby warrants that product sold to Buyers shall be free of defects in workmanship and materials, for a period as follows, starting from the date of shipment (B/L): One year for the GrainPro® TranSafeliner™.

The warranty liability is limited to replacement of defective products within the warranty period at GrainPro's plant in accordance with the provisions specifically and expressly set forth herein.

The Buyer will pay for the products which need to be replaced under warranty, a percentage of the full list price according to the ratio between the period, which has passed until replacement, and the full warranty period.

The Buyer shall bear the shipping costs for shipment of defective Products to GrainPro, and GrainPro shall bear the shipping costs of returning good Products to Buyer.

The Warranty does not cover the cost of any service, work, or material required for the replacement of defective Products at the site of installation.

GrainPro shall have no obligation under the warranty to replace defective Products or parts thereof if the defect is a result of any of the following: normal wear and tear; damages occurring after delivery, accidents, acts of God, or catastrophes, buyer's fault or negligence, improper storage or installation and improper maintenance.

Replacement costs and shipping charges for Products found not to be under warranty as specified above shall be paid in full by the Buyer before new/refurbished Products are shipped.

Notwithstanding the above, if the Products include main parts or sub-assemblies purchased by GrainPro from other vendors ("Additional Equipment"), then the period and terms of warranty for Additional Equipment are limited to the period and terms offered by the vendors of such equipment.

The Buyer agrees that the warranty liabilities of GrainPro shall be and are limited to the express foregoing terms: THE EXPRESS WARRANTIES AND OBLIGATIONS SET FORTH ABOVE, ARE AND SHALL BE IN LIEU OF ALL OTHER WARRANTIES AND OBLIGATIONS OF GRAINPRO, and EXPRESSED OR IMPLIED. EXCEPT TO THE EXTENT HEREIN PROVIDED, GRAINPRO DOES NOT MAKE AND SHALL NOT BE DEEMED TO MAKE ANY WARRANTY WHATSOEVER, TO ANY END USER OR TO ANY OTHER PERSON OR PARTY, INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR OF FITNESS FOR ANY PARTICULAR USE OR PURPOSE. GRAINPRO SHALL NOT BE LIABLE FOR ANY LOSS OF USE, SALES OR PROFIT OR FOR ANY INDIRECT, CONSEQUENTIAL, OR INCIDENTAL DAMAGES CAUSED BY OR SUFFERED AS A RESULT OF THE SALE OR USE OF THE PRODUCTS.